Thin Stone Veneer on Cement Board Run-to-Grade Installation

Sure Cavity™ (SC 5016, SC 5032) and **10mm Sure Cavity**™ (SCMM 2516, SCMM 2532)
Wall Opening Weeps™ (WOW 9095)

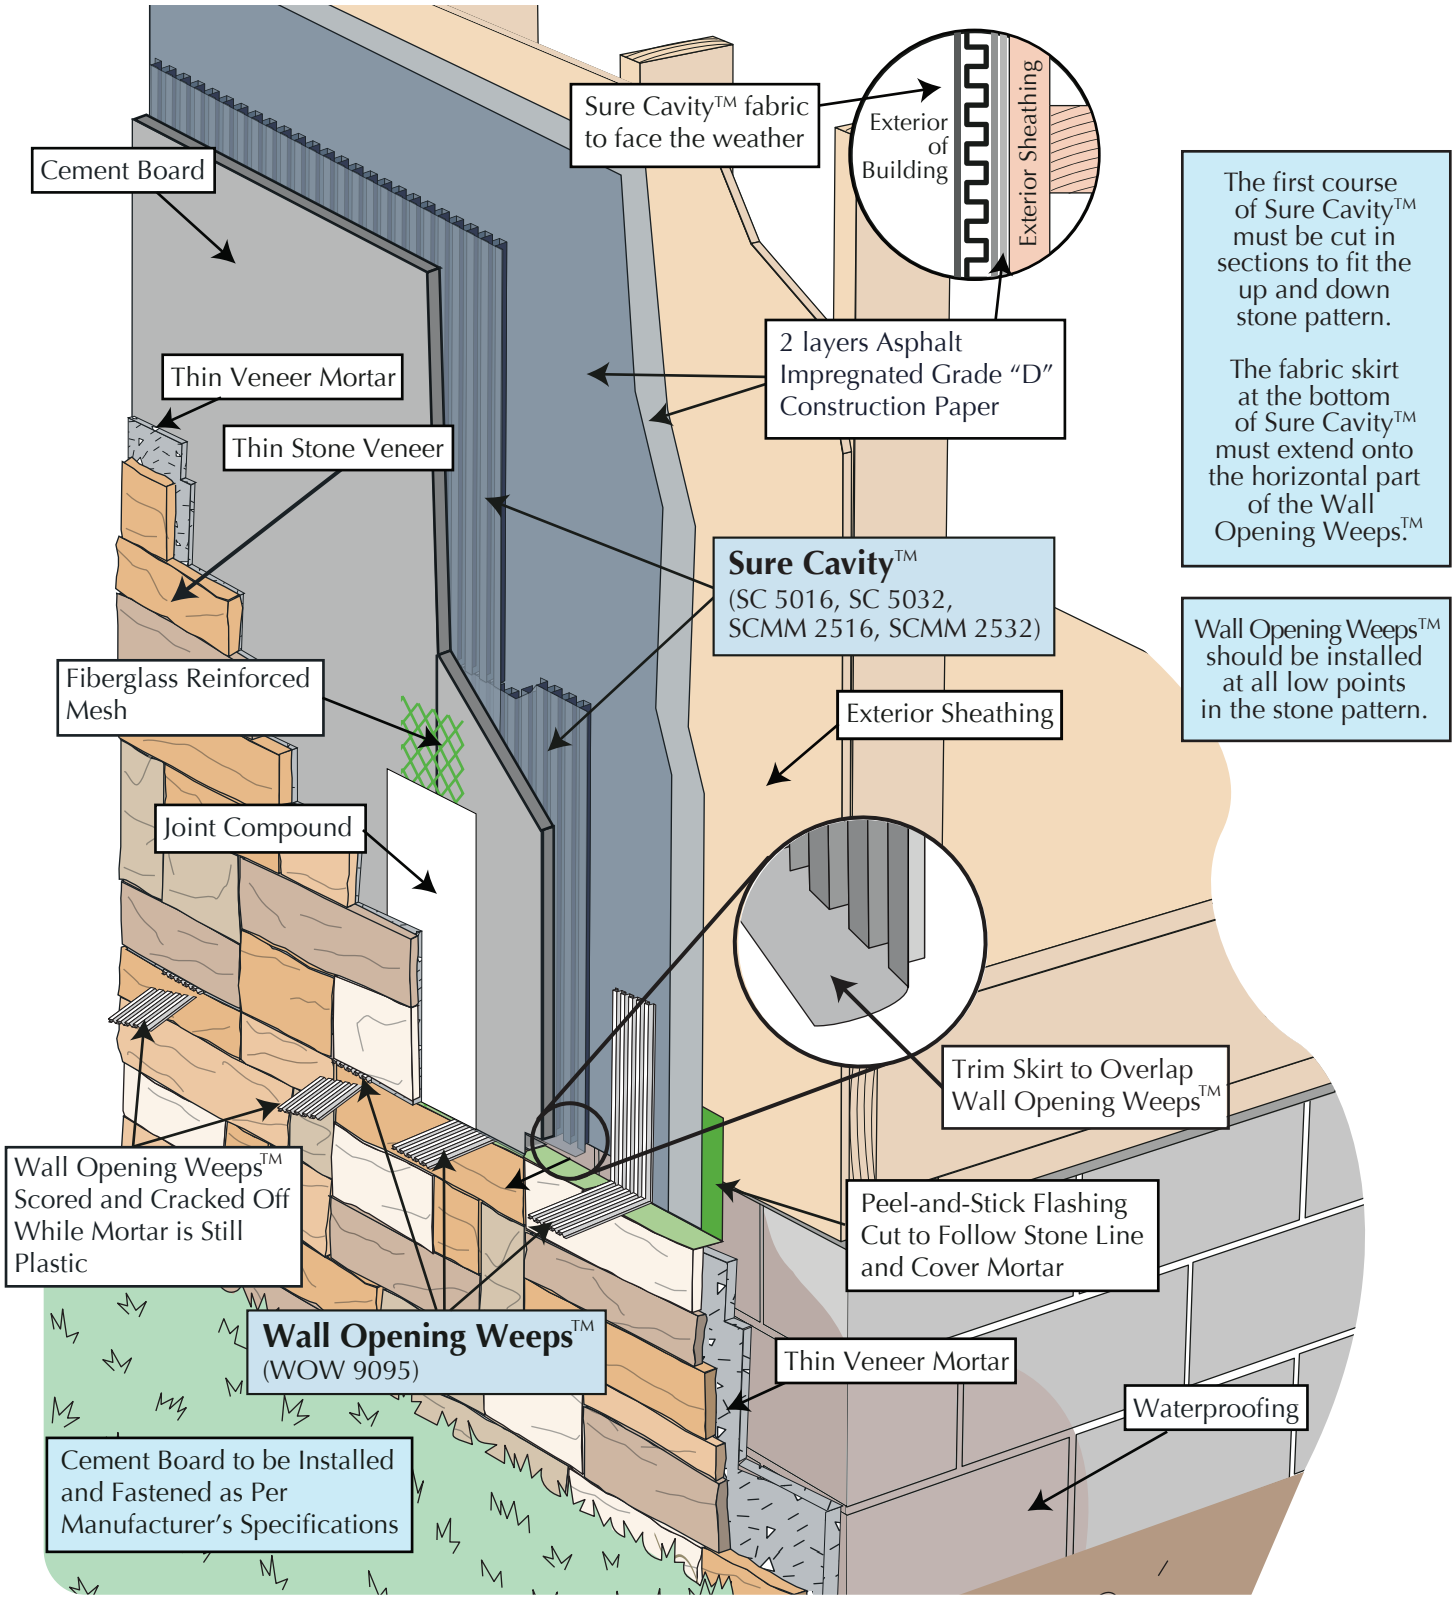

The first course of Sure Cavity™ must be cut in sections to fit the up and down stone pattern.

The fabric skirt at the bottom of Sure Cavity™ must extend onto the horizontal part of the Wall Opening Weeps.™

Wall Opening Weeps™ should be installed at all low points in the stone pattern.

Copyright © Masonry Technology Incorporated, 12/2009, All Rights Reserved.

01TR10WD004